NA - 503-H / NA - 503-S

For SmallHD 503 UltraBright On-Camera Monitor with HDMI 1.4 Input / SDI Input PN 17925 / 17925S

User Manual Housing Monitor

Introduction	2
Package Contents	2
Important Instructions	3
Part Names and Functions	4
Housing Mount	7
Opening the Housing	8
Closing the Housing	9
Setup Options	10
Cable Connection	12
Preparation for Use	16
Pre-installed M16 Vacuum Valve II	18
Care/Storage	19
Warranty	20
Specifications	21
HDMI Cable Compatibility	22

INTRODUCTION

Thank you for purchasing this Nauticam product.


Before using the product, please read this manual thoroughly to familiarize yourself with full scope of functions on the product as well as ensuring that you will use the product correctly.

NA - 503-S (SDI)

PACKAGE CONTENTS

Make sure that you have all the included items listed below before using this product. If some items are missing or damaged, contact your local Nauticam dealer.

NA - 503-H (HDMI)

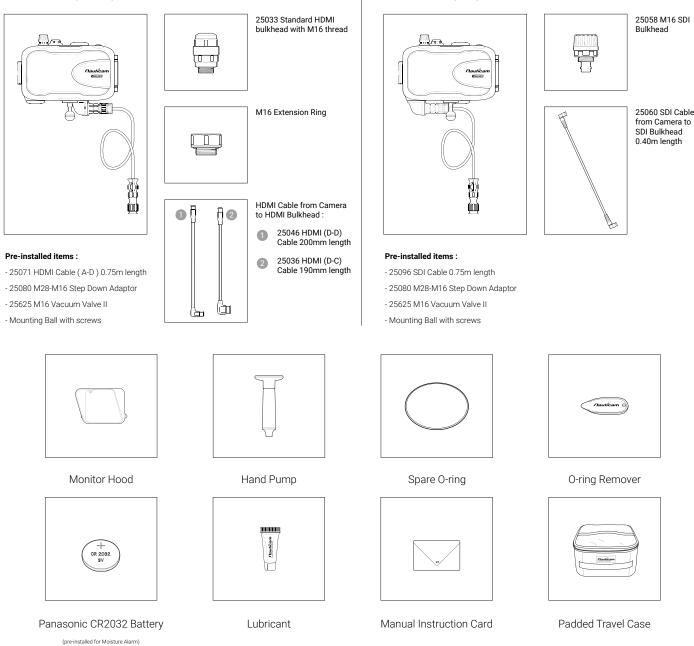

After purchase, we suggest that you reuse all packaging materials for future travelling.

IMPORTANT INSTRUCTIONS

1

Water-tight test of the housing (without monitor inside) before usage is recommended as well as any O-ring renewal and port change.

3

Only the accesories specified by Nauticam must be used. Third-party accessories may result in malfunctions or damage to the product.

5

Do not stretch any O-rings excessively. Only remove it using Nauticam O-ring remover.

7

Do not attempt to remove parts of the housing yourself. Repairs must be done at authorized service centers only.

9

Do not expose the housing in direct sunlight for a prolonged period.

11

Prevent any sand or dust or water penetration inside the housing. Be extra careful when inserting or removing the monitor.

2

Do not seal the housing when travelling by air as this may lead to a pressure difference between the atmosphere and inside the housing.

4

Use only Nauticam lubricant on silicone rubber O-ring.

6

Discontinue use immediately when there is a sign of leakage.

8

The housing should be positioned on the a stable and safe surface on land.

10


Do not open the housing in wet or sandy environment. Protect the housing from moisture and debris in order to prevent malfunction or leakage.



This product is not intended for use by children, or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised and/or given instruction by a responsible person concerning use of the product to ensure that they can use it safely.

PART NAMES AND FUNCTIONS


Rear View

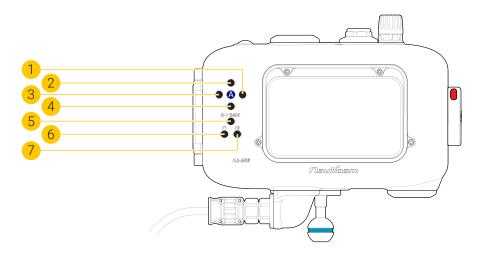




PART NAMES AND FUNCTIONS


Front + Bottom Views

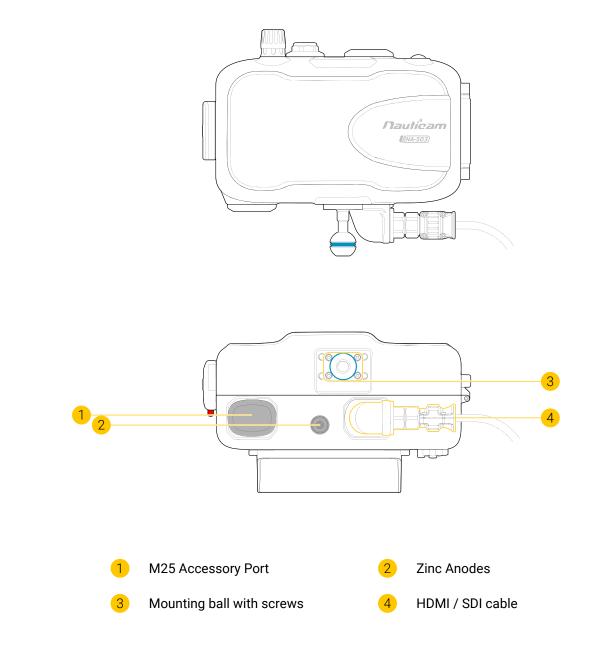

PART NAMES AND FUNCTIONS


Top + Side Views

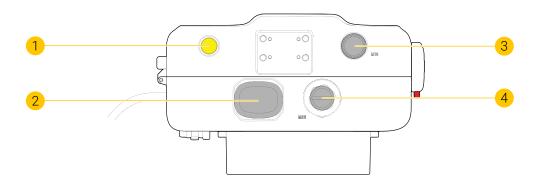

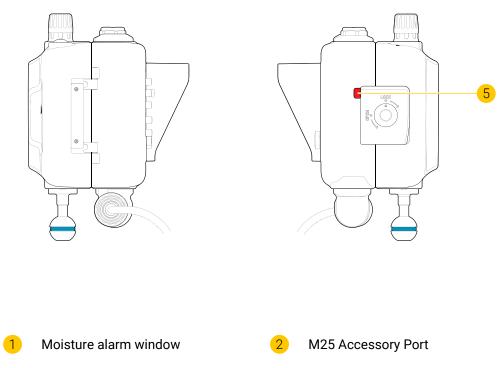


4

- 3 M16 Vacuum valve II
- 5 Housing unlock button

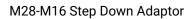

HOUSING MOUNT

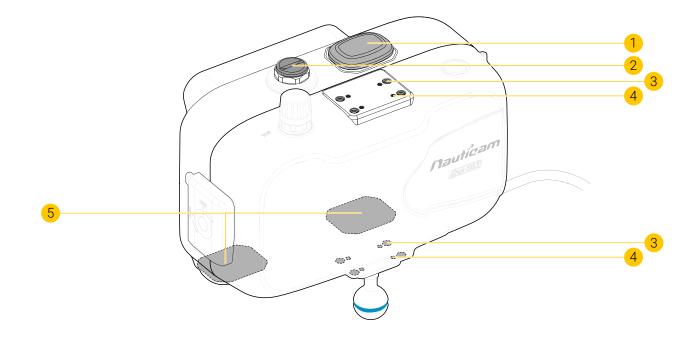

Housing mount


Compatible accessories

1	M25 Accessory port	25071 25096	HDMI 1.4 cable (A-D) in 0.75m length SDI Cable in 0.75m length
2	M16 Accessory port	25058	M16 SDI Bulkhead
3	1/4"-20 UNC holes	17951	Nauticam Monitor Housing Mounting System
4	M3 Screw holes	17958	Mounting Ball
5	M25 Accessory port	25071 25096	HDMI 1.4 cable (A-D) in 0.75m length SDI Cable in 0.75m length

OPENING THE HOUSING


* drawings as illustrations only

1

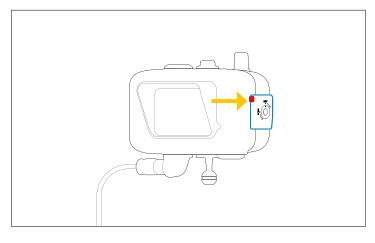


depress housing unlock button

2

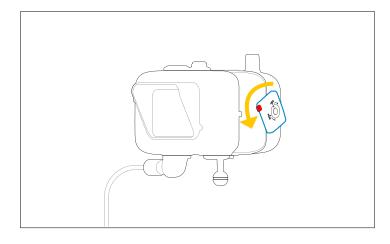

turn housing lock latch anti-clockwise to open the housing

3

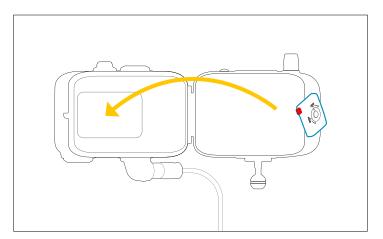


flip open the back housing when lock latch is aligned to 'open' position

CLOSING THE HOUSING

* drawings as illustrations only

1

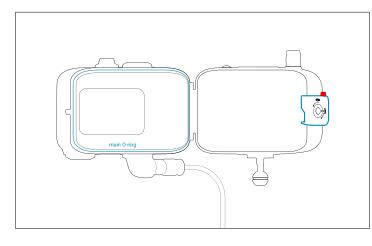


before closing the housing, clean and lubricate the main O-ring


make sure nothing is caught between front and back housing and that they are fully aligned before locking

insert the housing shaft into the shaft hole and then rotate the lock latch clockwise until you hear and feel it click into place

2

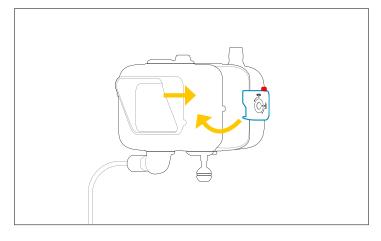


3

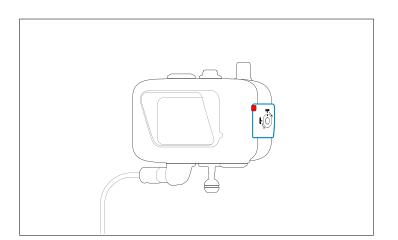

housing locked in place securely

SETUP OPTIONS - HDMI


* drawings as illustrations only

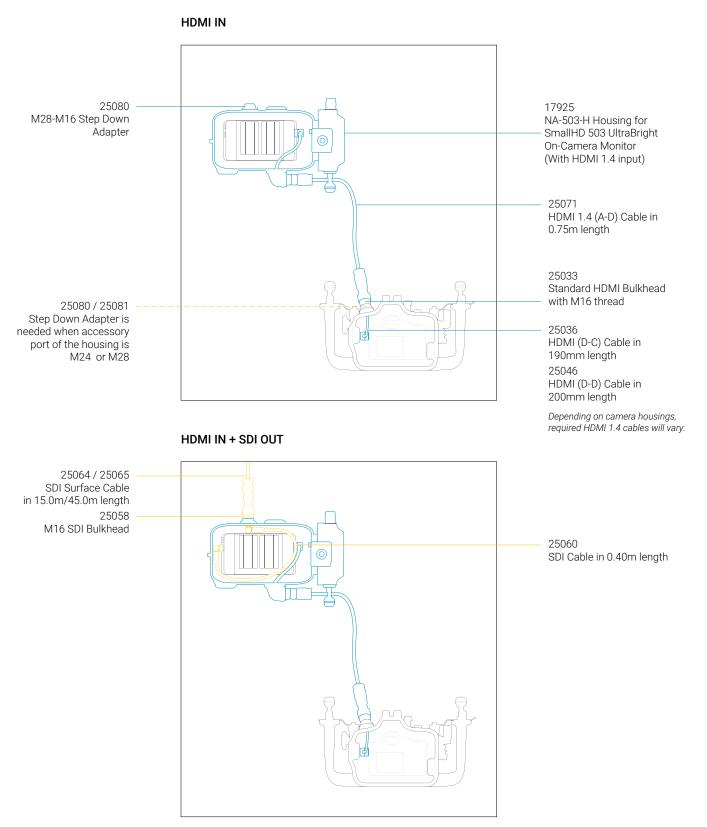


included in packagenot included in package

SETUP OPTIONS - SDI

* drawings as illustrations only

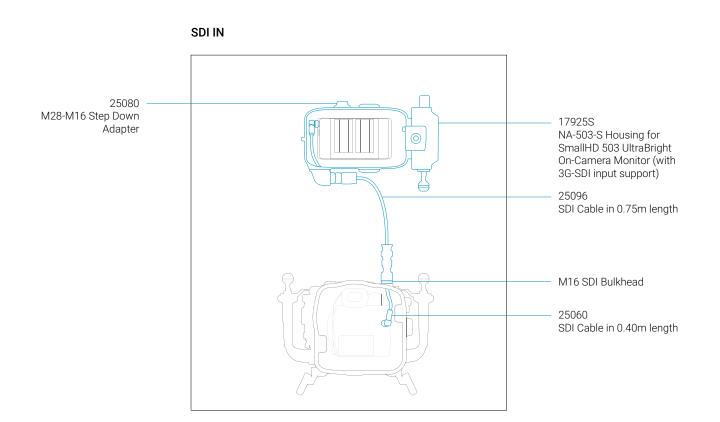

SDI IN + SDI OUT

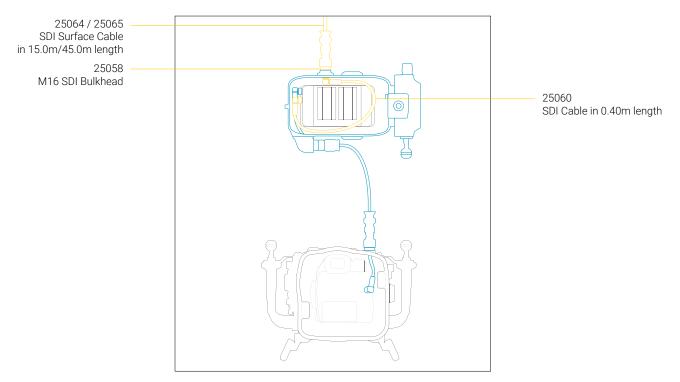

included in package
not included in package

CABLE CONNECTION - HDMI IN


* drawings as illustrations on

1



turn the two locking levers in the direction as shown

2

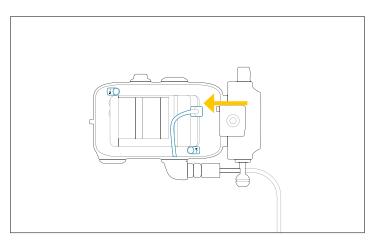


-Ch

07

connect the HDMI cable to the monitor HDMI connector

then place the monitor inside the housing

3

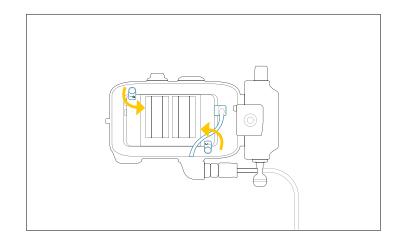


secure the monitor by turning the two locking levers towards the monitor

CABLE CONNECTION - SDI IN

* drawings as illustrations only

1

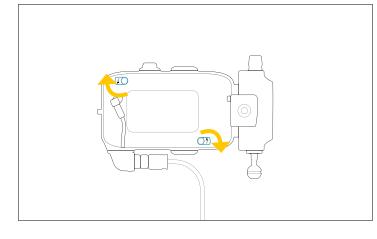

P

SDI Cable to Monitor Connector


turn the two locking levers in the direction as shown

connect the SDI cable to the monitor SDI connector

then place the monitor inside the housing

3

2

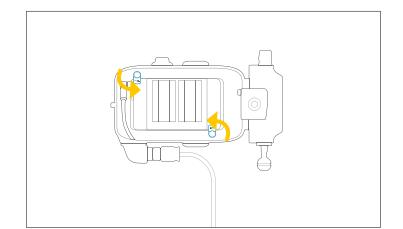

dr)

place the monitor inside the housing


then secure the monitor by turning the two locking levers towards the monitor

CABLE CONNECTION - SDI OUT

* drawings as illustrations only


SDI Surface Cable to Monitor Housing

*Please note that M16 SDI Bulkhead, 25060 SDI cable and SDI surface cable is not included in the package

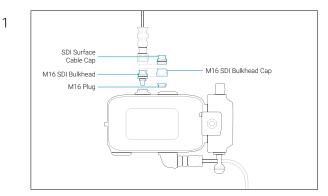

unscrew the M16 plug from 25080 M28-M16 Step Down Adapter on the monitor housing with a coin and remove the caps of M16 SDI Bulkhead and SDI surface cable


tighten the M16 SDI Bulkhead into the pre-installed M28-M16 step down adapter

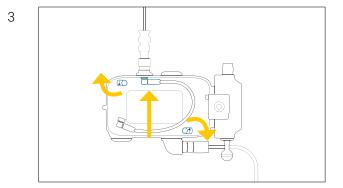


turn the two locking levers in the direction as shown

then connect the 25060 SDI cable to the M16 SDI bulkhead as shown


5

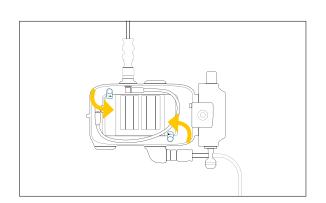

then secure the monitor by turning the two locking levers towards the monitor

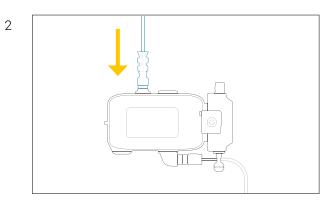

plug the cable into the SDI bulkhead

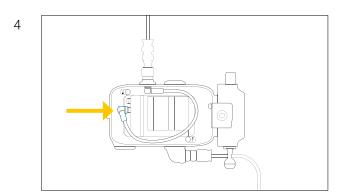

place the monitor inside the housing


then wrap the internal SDI cable around the battery and connect the cable to the monitor SDI-out socket

CABLE CONNECTION - TO CAMERA HOUSING


* drawings as illustrations only

1


For Both HDMI + SDI

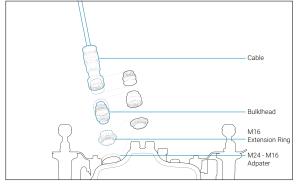


remove the caps of HDMI/SDI cable and bulkhead (M28-M16/M24-M16 adapter and M16 Extension ring if needed)

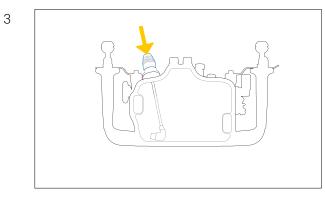


connect the bulkhead onto camera housing

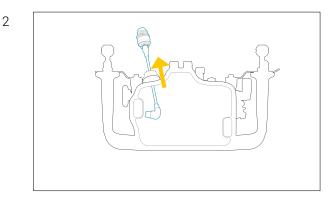

connect the internal cable to the bulkhead as shown

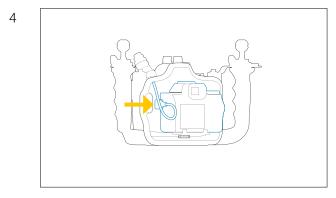

connect the internal cable to the camera connector

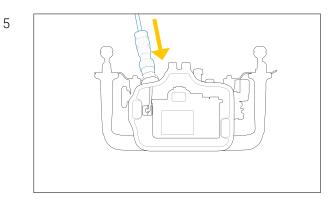


connect the HDMI/SDI cable onto the bulkhead

PREPARATION FOR USE

* drawings as illustrations only

Coating housing O-ring

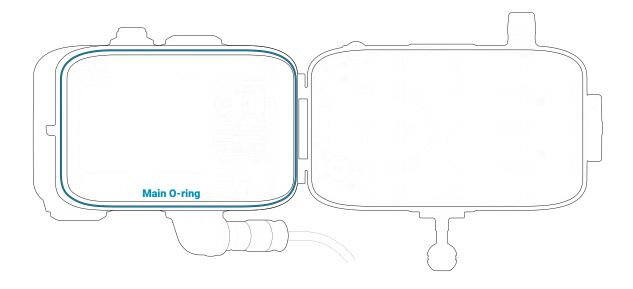

1

remove the main O-ring using an O-ring remover

2

clean the O-ring groove with a cloth and ensure that it is free from salt or other foreign materials

З

lightly coat it with provided lubricant


4


return the main O-ring by slowly pressing from one corner to the whole perimeter

PREPARATION FOR USE

* drawings as illustrations only

Setting up moisture alarm

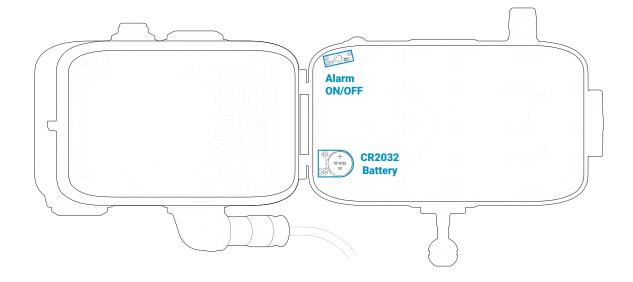


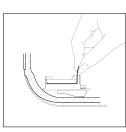

remove battery insulation film


2

4

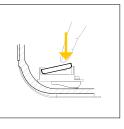


press the battery down until it click into place

3

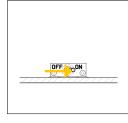

switch on the alarm - the moisture alarm window will flash in BLUE when it is working correctly

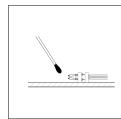


test the alarm - connect the wires with a dampened cotton bud; the alarm will give a repeating 'beep' and the mositure alarm window will flash RED

PRE-INSTALLED M16 VACUUM VALVE II

* drawings as illustrations only

Vacuum valve system

1

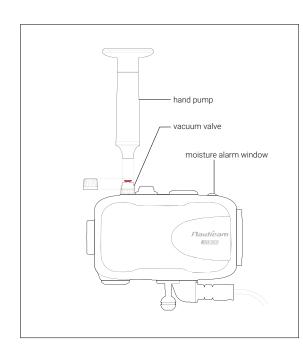


remove the cap from the pre-installed vacuum valve

connect hand pump to the valve

pump several times until it reaches the target vacuum level


close vacuum valve cap

Moisture alarm window colour indication :

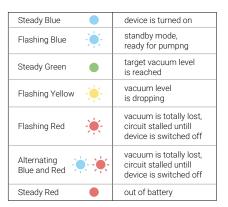

* It is recommended to leave the housing for at least 20mins to ensure it is sealed. If the LED light changes from steady green light to rapidly flashing yellow light, that means there is a leakage. Please check every O-ring and then conduct the vacuum test again.

2

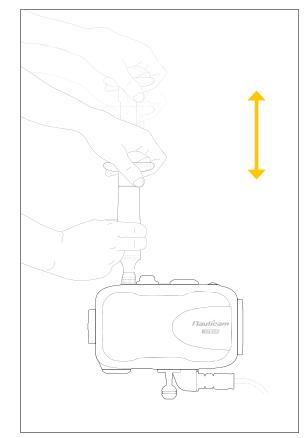

CARE/STORAGE

1

Soak the housing system in fresh water after salt water usage

3

We recommand cleaning and inspecting the main O-ring each time after diving for any damage and every time the housing is opened.

5

We recommand to ship the housing to our servic centers for a complete overhual after 500 dives/every 3 years.

2

Operate all controls and buttons at least 3 times while immersed in fresh water

4

Protect the housing with robust and shock-proof travel case during transportation. Do not travel with monitor inside housing.

WARRANTY

All NAUTICAM Housing Products and Viewfinders are warranted against any material and manufacturing defects for two years from the date of purchase for consumer use. NAUTICAM Optical Accessories are warranted against material and manufacturing defects for a period of one year, and HDMI cables carry a year warranty.

This warranty only applies to products purchased from authorized NAUTICAM dealers and does not extend beyond the original retail purchaser.

To return your product for service, please contact your regional authorized service center(s). Please note that this warranty only applies when the product is purchased in the territory where the service center is located.

NAUTICAM accepts no liability for any damage to and defects in the housing caused by improper use and/or poor maintenance; it is the responsibility of the owner to carefully follow the instructions in our manuals.

NAUTICAM does not hold responsibility for damage, of any nature, to any equipment used with and/or placed within our products.

NAUTICAM accepts no liability for any loss of captured images or the inability to capture images even if it is due to the malfunctioning of our products.

Unauthorized modifications and/or repairs of our products will automatically invalidate the warranty.

SPECIFICATIONS

NA-503-H

SmallHD 503 UltraBright On-Camera Monitor (With HDMI 1.4 input)

Construction

Housing body	Hard Anodized Aluminium Alloy
Display window	Abrasion Resistant Polycarbonate

Dimensions

Width	252 mm	
Height	139 mm	
Depth	111 mm	

Weight

In air	1.9 kg
Buoyancy in water	0.39 kg (w/ SmallHD 503 monitor & 2pcs x NP-F750 batteries)

Depth

Rating	100 m	
.		

Port specifications

Port accessories	1 x M16, 2 x M25, 1 x M28
Pre-installed adaptor	M28-M16 Step Down Adaptor

Essential items for surface monitor

25058 M16 SDI Bulkhead 25060 SDI Cable in 0.30m length (for connection from monitor to SDI bulkhead)

25065 SDI Surface Monitor Cable in 45m length

NA-503-S

SmallHD 503 UltraBright On-Camera Monitor (with 3G-SDI input support)

Construction Housing body Hard Anodized Aluminium Alloy Display window Abrasion Resistant Polycarbonate Dimensions Width 252 mm Height 139 mm Depth 111 mm Weight In air 1.9 kg 0.39 kg (w/ SmallHD 503 monitor & 2pcs x NP-F750 batteries) Buoyancy in water Depth Rating 100 m

Port specifications

Port accessories	1 x M16, 2 x M25, 1 x M28
Pre-installed adaptor	M28-M16 Step Down Adaptor

Optional accessories for surface monitor

25096 SDI Cable in 0.75m length (for connection from monitor to SDI bulkhead)
25062 SDI Surface Monitor Cable in 5m length
25064 SDI Surface Monitor Cable in 15m length
25063 SDI Surface Monitor Cable in 30m length

HDMI CABLE COMPATIBILITY

25036 and 25046 are both included in NA-503-H package

25036 HDMI (D-C) Cable in 190mm length

Compatible Camera Nikon D5 D500 D7500 D7500 D7500 Canon R SDIV SDISR Global GDI1 SDISR GDI1 SDISR SDI2 SDI3 SDI3 SDI3 SDI3			
D750 D7500 Canon R 5DIV 5DSR 6DII 7DII	Compatible Camera	Nikon	D5
D7500 Canon R 5DIV 5DSR 6DII 7DII			D500
Canon R 5DIV 5DSR 6DII 7DII			D750
5DIV 5DSR 6DII 7DII			D7500
5DSR 6DII 7DII		Canon	R
6DII 7DII			5DIV
7DII			5DSR
			6DII
			7DII
			80D

25046 HDMI (D-D) Cable in 200mm length

Compatible Camera	Sony	A911
		A7IV
		A6500
		RX100VII
	Nikon	Z50
	Olympus	EM1X

Nauticam Internationl Ltd.

Rm 2203, CCT Telecom Bldg, 11 Wo Shing St, Fo Tan, Hong Kong

Tel. +852 - 26902711 Fax. +852 - 26909778 URL. www.nauticam.com Gallery. www.nauticam.smugmug.com